

Application for Freeform Optics at NASA

Garrett J. West, Joseph M. Howard NASA GSFC

EPIC Freeform Workshop

Outline



- 1. Motivation
- 2. Applications
 - A. Astrophysics 2020 Decal Survey
 - LUVOIR mission
 - OST mission
 - B. Earth Science: SAFE mission
 - C. Planetary Science: TIMERS instrument
 - D. CubeSats: XY Penta testbed

Motivation



 NASA Scientists are often constrained by limited budgets and hence smaller instruments, but their expectations are unconstrained!

- Advantages of using freeform surfaces in reflective telescopes:
 - Reduce Volume
 - Increase the Field of View
 - Improve Image Quality
 - Fewer the number of surfaces

Applications




- Astrophysics
- ◆ Earth Science
- Planetary Science
- Cubesat and Smallsat platforms for any science application

NASA Technology Roadmap



- ◆ Technology Area 8.1.3
 - Wide Field of View Reflective Imager
 - 30deg field of view with >60cm Aperture
 - 5deg field of view with >200cm Aperture
- Technology Area 8.2.1
 - Large optical mirrors
 - UV, Optical ,Infrared wavelengths
 - 6.5m-30m diameter
 - <25nm RMS Surface Figure
 - <20kg/m^2 areal density
 - <\$0.5M/m^2 cost

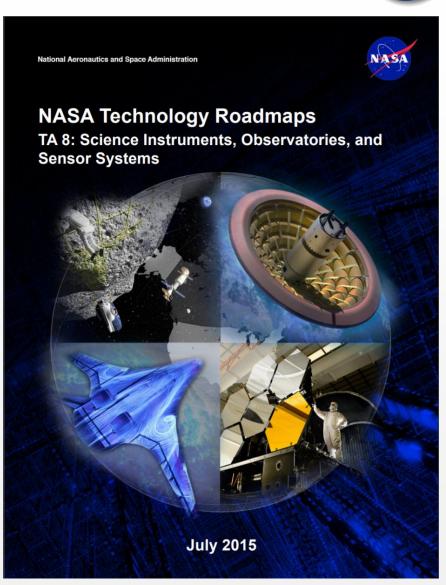

2020 Astrophysics Decadal Survey



2020 Astrophysics Decadal Survey



 NASA HQ selected four large mission concept studies started in Jan 2016 to prepare for Astro2020 Decadal Survey

Potential Freeform Optics Applications

- Large Ultra-Violet Optical Infrared Surveyor (LUVOIR)
- Habitable Exoplanet Imaging Mission (HabEx)
- Origins Space Telescope (formerly Far-IR Surveyor)
- Lynx (formerly X-Ray Surveyor)
- LUVOIR and OST Study office at GSFC
- HabEx Study Office at JPL
- Lynx Study Office at MSFC

Outline



- 1. Motivation
- 2. Applications
 - A. Astrophysics 2020 Decal Survey
 - LUVOIR mission
 - OST mission
 - B. Earth Science: SAFE mission
 - C. Planetary Science: TIMERS instrument
 - D. CubeSats: XY Penta testbed

What is LUVOIR?



Large UV / Optical / Infrared Surveyor (LUVOIR)

- A space telescope concept in tradition of Hubble
 - Broad science capabilities
 - Far-UV to Near-IR bandpass
- ~ 8 16 m aperture diameter
- Suite of imagers and spectrographs
- Serviceable and upgradable*
- Hubble-like guest observer program


Crab Nebula with HST ACS/WFC

Credit: NASA / ESA

"Space Observatory for the 21st Century"


Ability to answer questions we have not yet conceived

Imagine astronomy without Hubble ...

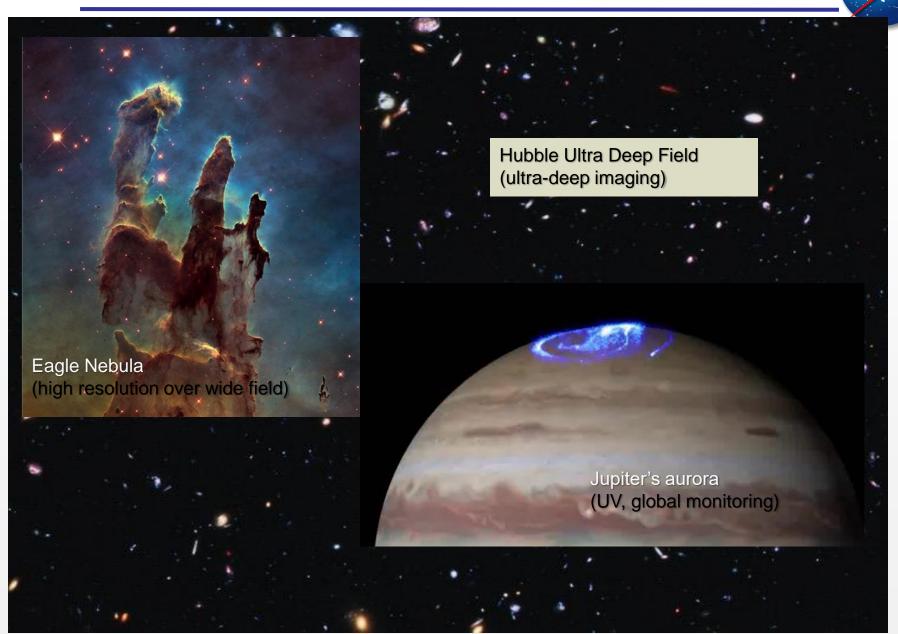


Imagine astronomy with LUVOIR ...



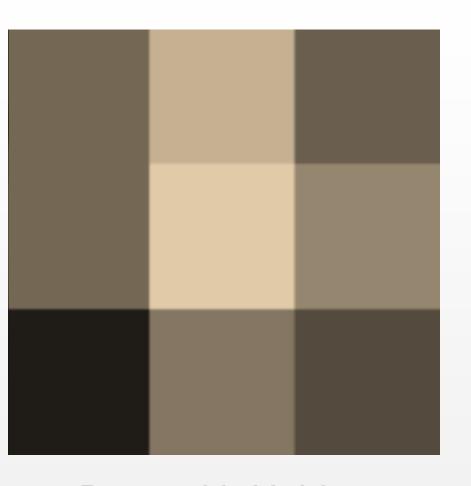

Pluto with Hubble

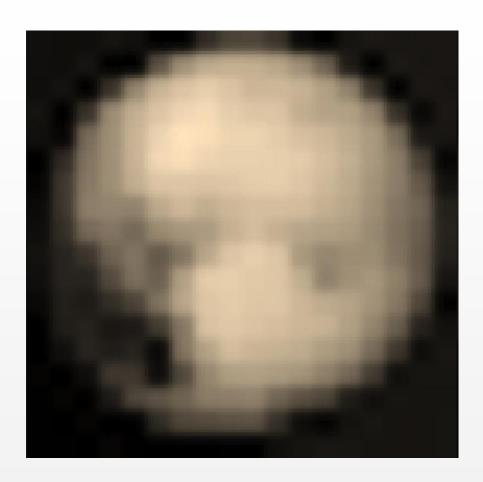


Pluto with 15-m LUVOIR

Credit: W. Harris (LPL)

Imagine astronomy with LUVOIR ...



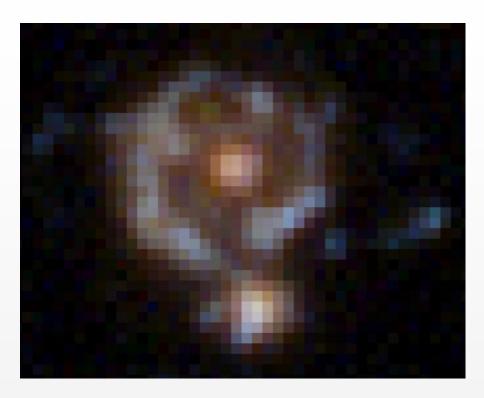




Galaxy at z = 2 with Hubble

Galaxy at z = 2 with 12-m LUVOIR

Characterizing Earth 2.0 ...




Solar System from 13 parsec with coronagraph and 12-m telescope

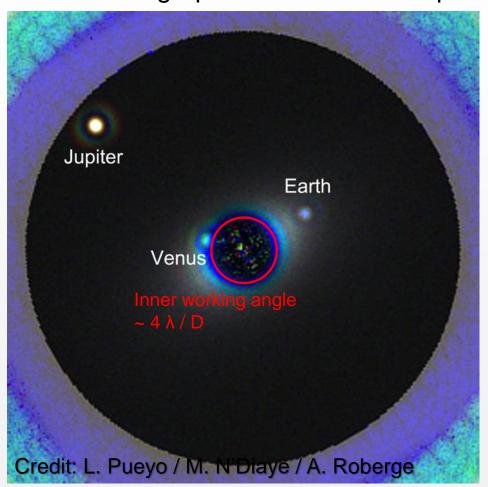

Characterizing Earth 2.0



Solar System from 13 parsec with coronagraph and 12-m telescope

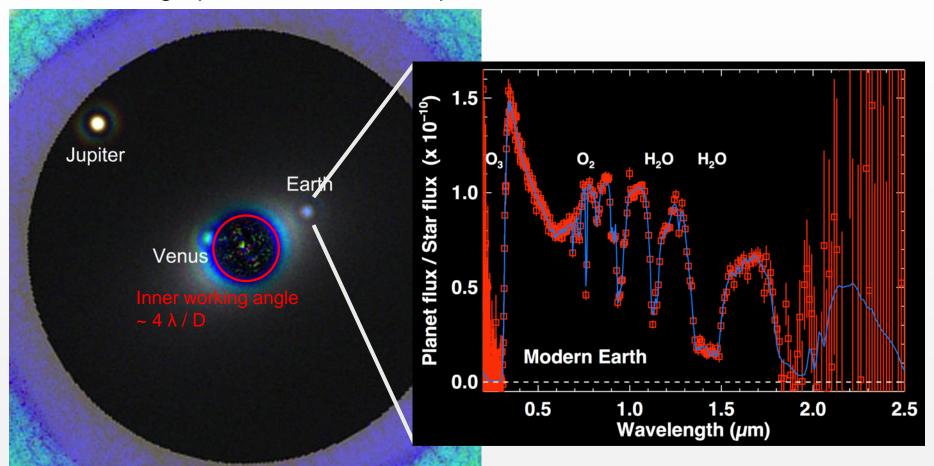

Credit: T. Robinson / G. Arney


Note: In this representation, spacecraft & sunshield are notional.



Deployment Video Here

"Yep, it's big."



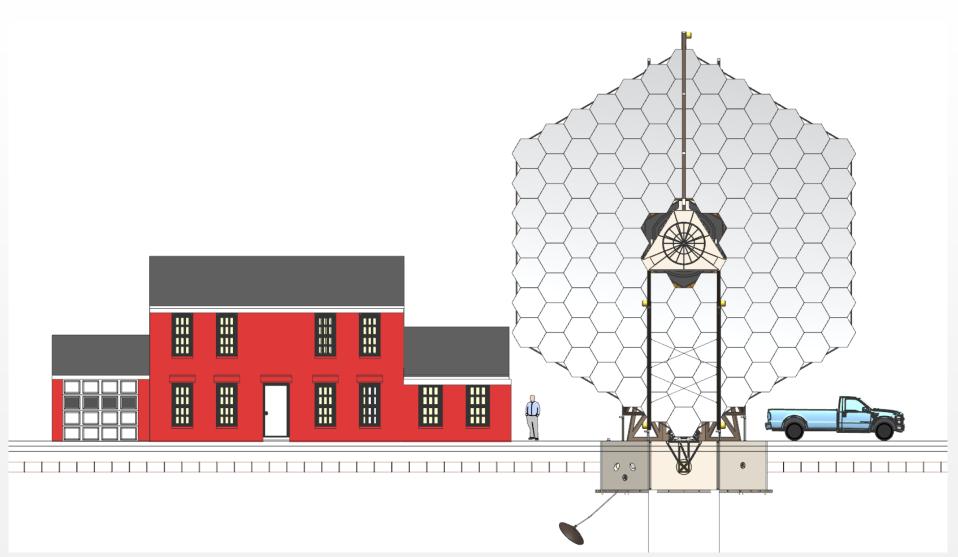

LUVOIR Freeform Applications



LUVOIR Instruments

- LUVOIR Ultraviolet Multi Object Spectrograph (LUMOS)
 - Fewer mirrors
 - Throughput is limited by the Al coating reflectivity in the UV
 - Improve image quality in UV
 - Reduce volume for limited instrument package
- 2. Coronagraph
 - Correct aberrated off axis field from telescope
- 3. High Definition imager (HDI)
 - Correct wide field of view
 - Improve image quality in UV and VIS
 - Reduce volume and mass

NASA Needs: UV grade freeform mirrors and reflective gratings

Outline




- 1. Motivation
- 2. Applications
 - A. Astrophysics 2020 Decal Survey
 - LUVOIR mission
 - OST mission
 - B. Earth Science: SAFE mission
 - C. Planetary Science: TIMERS instrument
 - D. CubeSats: XY Penta testbed

What is OST?




Origins Space Telescope (OST)

- Far Infrared Wavelengths 6-600um
- 4k Telescope
- 9m Aperture unobscured TMA telescope
- 5 instruments including medium and high resolution spectrometers, coronagraph, imager and polarimeter

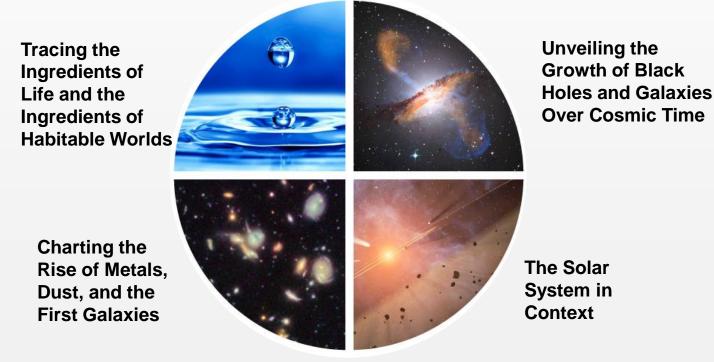

Ingredients of Life




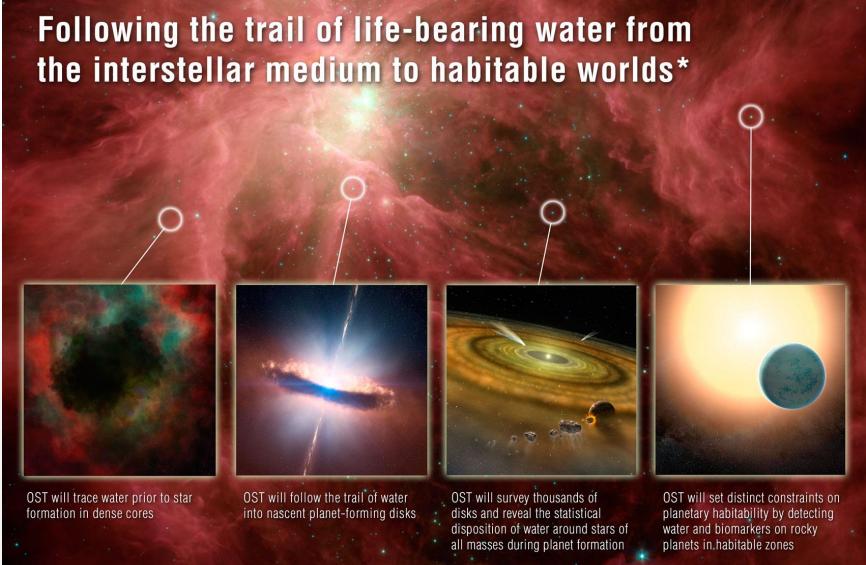


Exoplanet Biosignatures



Find conclusive evidence of the presence or absence of a life signature on at least ten exoplanets.

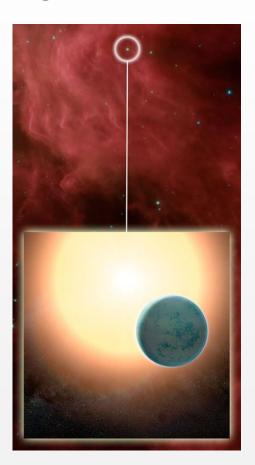


- Transiting exoplanet spectroscopy
- Technique pioneered with Spitzer Space Telescope
- · Key biomarkers accessible in the mid-infrared

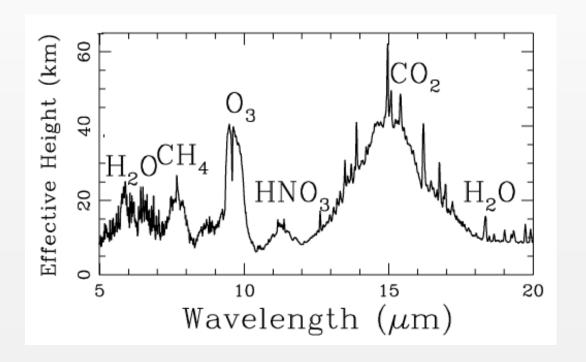


Huge Gain in Sensitivity



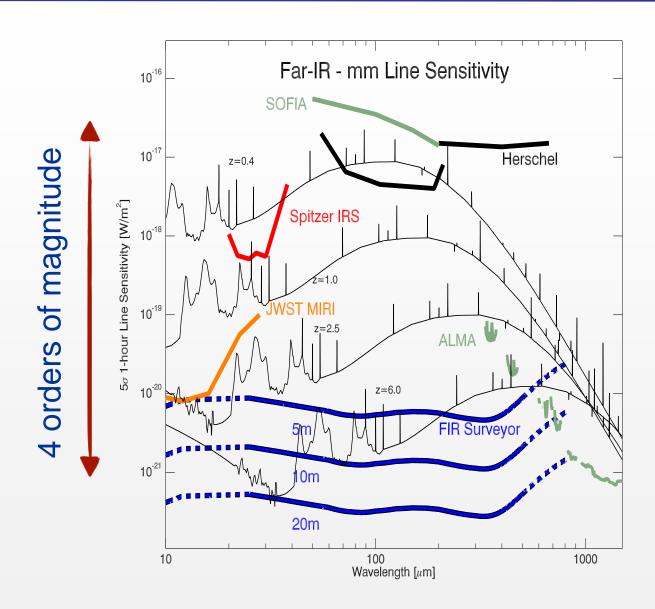


Deployed Observatory




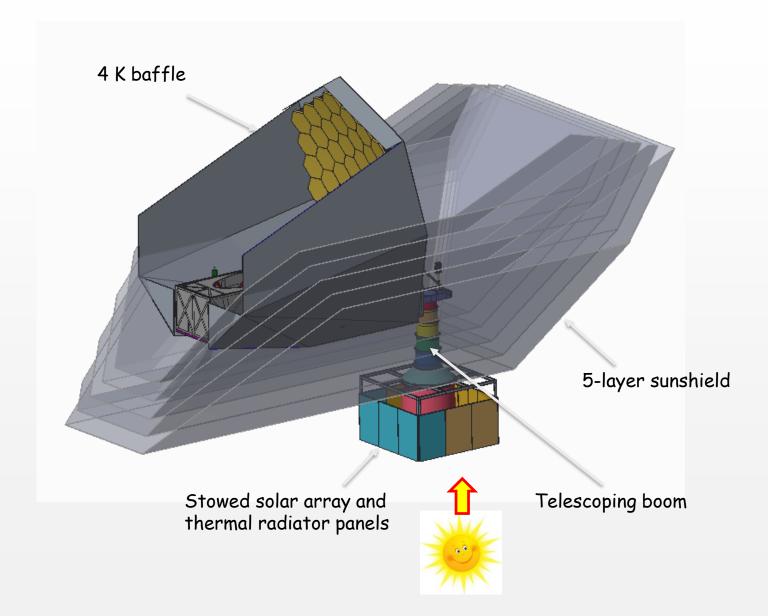

Instrument Module



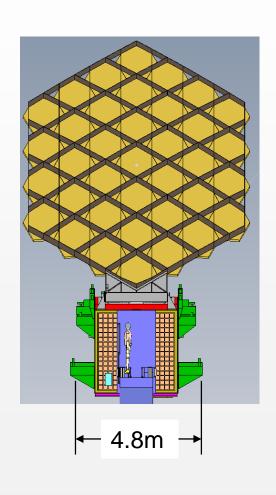

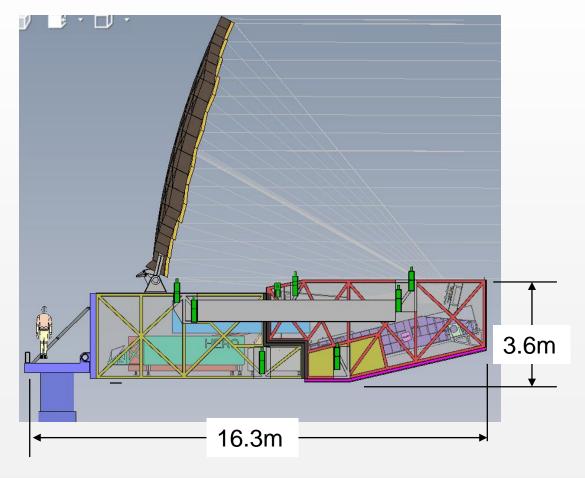

OST Freeform Applications



- Freeform mirrors help correct aberration caused by constrained mirror locations to be within packaging volume due to the folded telescope design architecture
- ◆ Freeforms are used to correct aberration over wide field of view

NASA Need: large cryo-stable freeform mirrors

Outline




- 1. Motivation
- 2. Applications
 - A. Astrophysics 2020 Decal Survey
 - LUVOIR mission
 - OST mission
 - B. Earth Science: SAFE mission
 - C. Planetary Science: TIMERS instrument
 - D. CubeSats: XY Penta testbed

What Is SAFE?




Structure and Function of Ecosystems (SAFE)


- Constellation of paired high resolution imager and spectrometer instruments
- Diurnal measurements at three times per day
- Capture vegetation functional response to environmental conditions.
- Visible wavelengths 450-1630nm

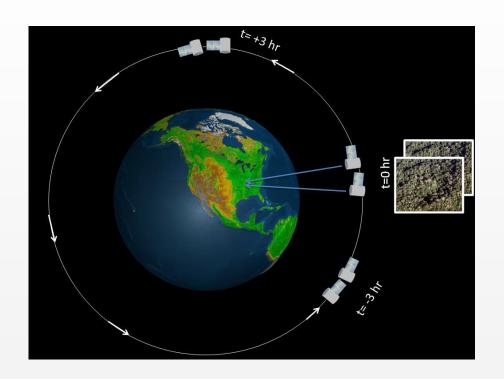

SAFE Science



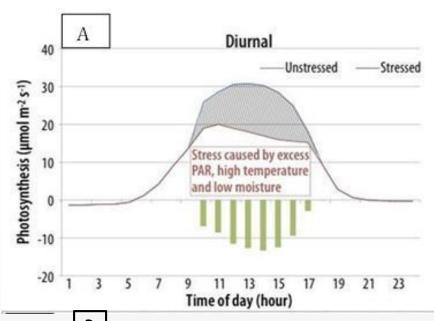

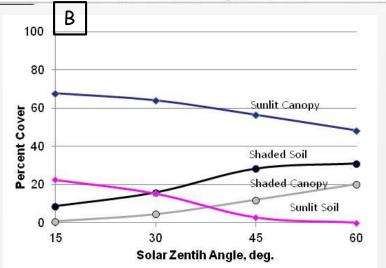




SAFE instruments provide multi-temporal spectral radiance measurements needed for vegetation function, and high definition vegetation structure (for reducing confounding diurnal effects, i.e. scene shadows). A. Diurnal photosynthetic CO₂ uptake for stressed and unstressed conditions. B. Illuminated and shaded vegetation for a forest canopy for changing solar zenith angle.

Spectrometer Freeform Optics




Comparison of Offner Spectrometer Optical Designs when using Freeform Mirrors

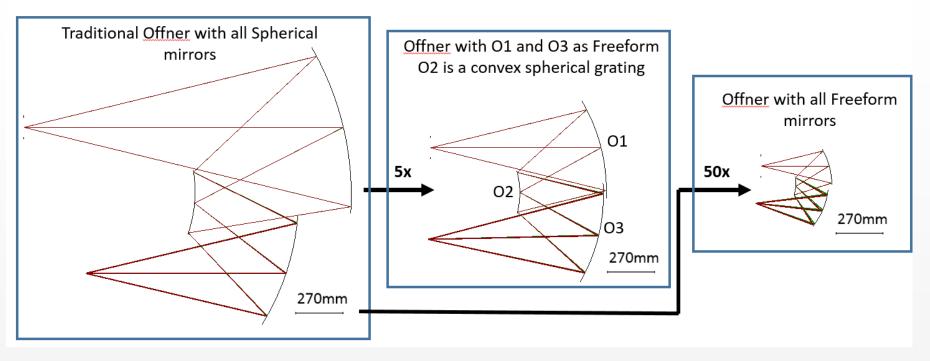

The common Offner spectrometer design form can be reduced in volume by a factor of 5x when using 2 freeform mirrors, and a factor of 50x when using all freeform mirrors with this Field of View. The middle design solution uses a spherical grating mirror (O2), which has a higher TRL but limited volume improvement. Each of these 3 designs has the same 112mm slit width and spectral dispersion requirement. The freeform surfaces can be optimized to correct for the steep ray angles over the wide field of view. This enables a design solution with a much smaller volume and better aberration correction.

SAFE MiniSpec Instrument



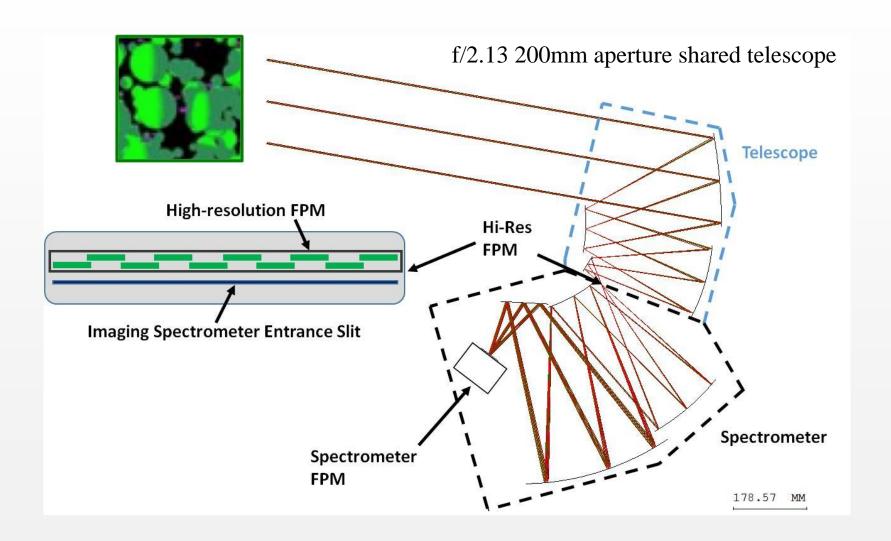

SAFE Freeform Optics



- ◆ Freeform optics are used to correct aberration from a fast <f/2.5 telescope with a wide field of view.</p>
- Freeforms are also used to greatly reduce the volume of the Offner spectrometer which is driven by the wide field of view

NASA Need: low cost, visible quality freeform mirrors

Outline



- 1. Motivation
- 2. Applications
 - A. Astrophysics 2020 Decal Survey
 - LUVOIR mission
 - OST mission
 - B. Earth Science: SAFE mission
 - **C.** Planetary Science: TIMERS instrument
 - D. CubeSats: XY Penta testbed






Thermal IMager for Europa Reconnaissance and Science

- Multichannel thermal infrared radiometer with the ability to measures cold surface temperature and reveal composition on Jupiter's moon Europa
- Two field's of view
- Wavelengths spectral range 8.5-200um
- Push Broom operation

Europa Imaged by NASA's Galileo

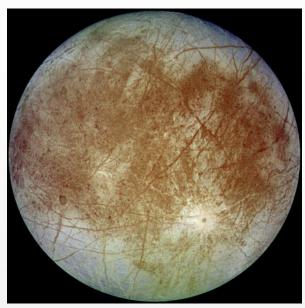

TIMERS Science




Assess the distribution of surface hazards, the load-bearing capacity of the surface, the structure of the subsurface, and the regolith thickness.

- Determine the distribution of boulders on the Surface
- Characterize the regolith depth


Assess the potential for geologic activity, the proximity of near surface water, and the potential for active upwelling of ocean material in landing zones.

 Thermal mapping instrument is best way to link activity to the surface source regions

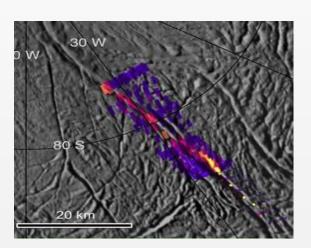

Characterize the ice shell and any subsurface water


 Subsurface water lenses within a few km of the surface should be detectable as a thermal anomaly for up to 100,000 years (Abramov et al., 2013)

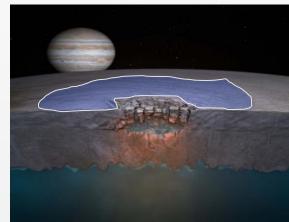

TIMERS Instrument



- Instrument has multiple fields of view with a common detector
 - Wide field for broad surface mapping
 - Narrow field for high resolution imaging
 - Calibration black body
 - Calibration deep space
- 300mm and 50mm
 Entrance Apertures
- <200m Ground Resolution at 100km altitude

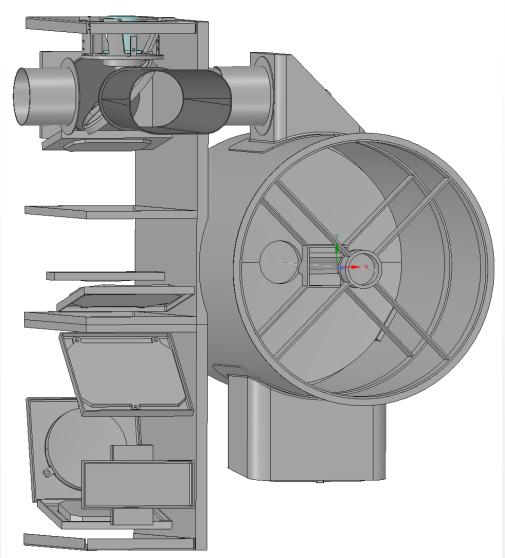


TIMERS Freeform



- Freeform mirrors enable compact packaging configuration allowing multiple fields of view to be combine into one instrument
- Freeform mirrors are also used to correct aberrations over the wide field of view

NASA Needs: low cost freeform mirrors with large departure (>1mm) from best fit sphere

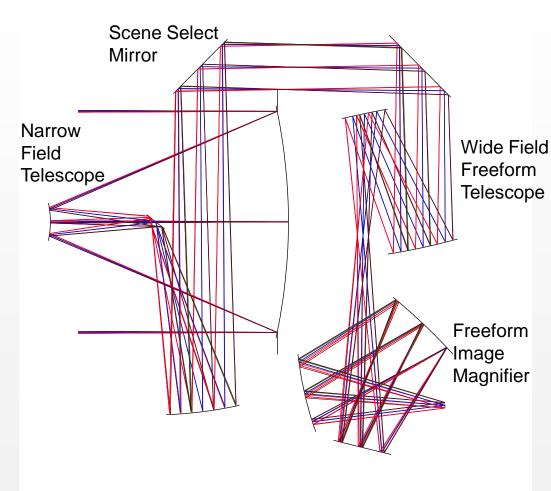

Outline



- 1. Motivation
- 2. Applications
 - A. Astrophysics 2020 Decal Survey
 - LUVOIR mission
 - OST mission
 - B. Earth Science: SAFE mission
 - C. Planetary Science: TIMERS instrument
 - D. CubeSats: XY Penta testbed

2 Mirror Freeform Design Survey




- Compare the different designs forms using 2 freefrom mirrors
 - Form #1: Z-configuration (Positive-Positive tilts)
 - Form #2: 4-configuration (Positive-Negative tilts)
- XY Polynomials
- ◆ Telecentric vs. Non-telecentric designs
- Evaluate how wide of a field and fast of an F/#
- ◆ Image quality of <20um RMS Spot diameter</p>

Freeform Design Forms




Z Configuration

4 Configuration

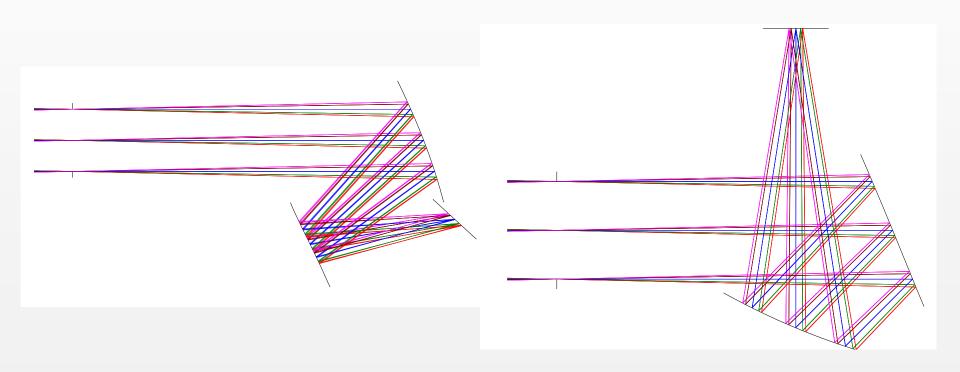


Design Survey FOV x F/#



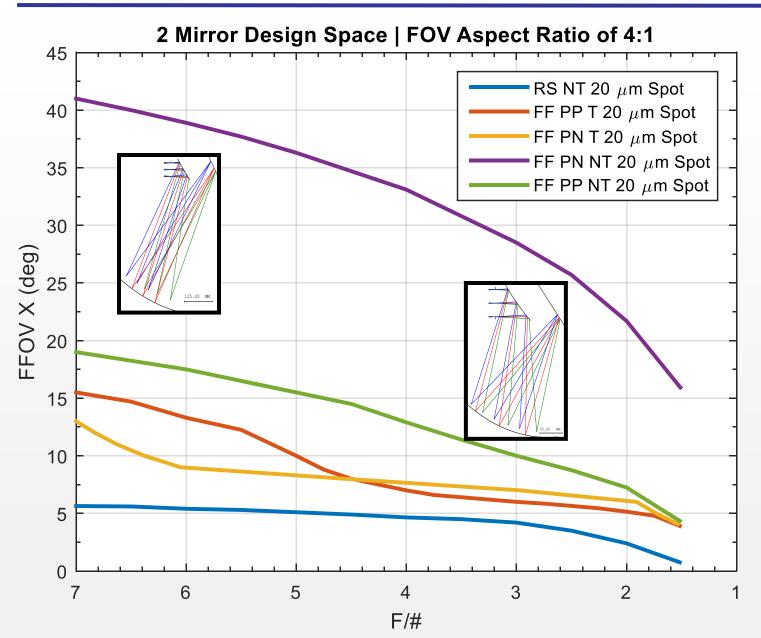

Design Survey Volume x F/#



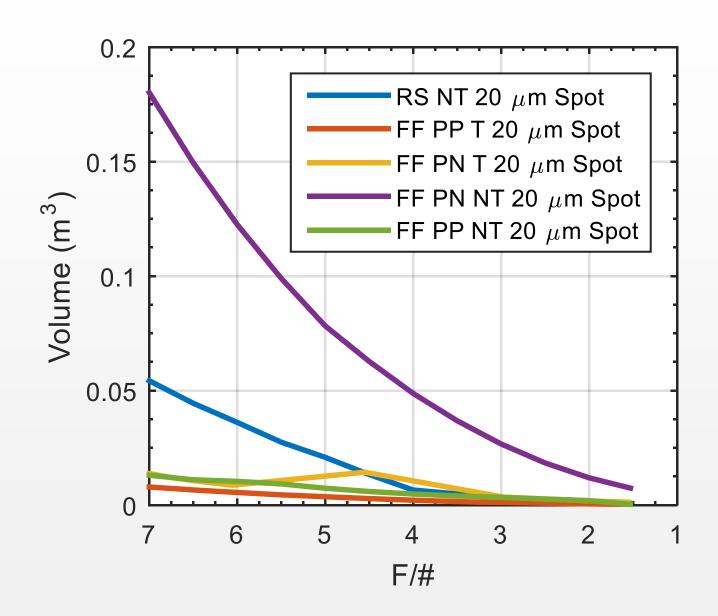

XY Penta Specifications




 Using design survey results the PP NT design best balances image quality and minimum volume

- Cube Sat application
- ◆ f/5 50mm EPD
- ♦ 8.73deg x 2.86deg
- 90deg beam deviation

XY Penta 2 Mirror Telescope




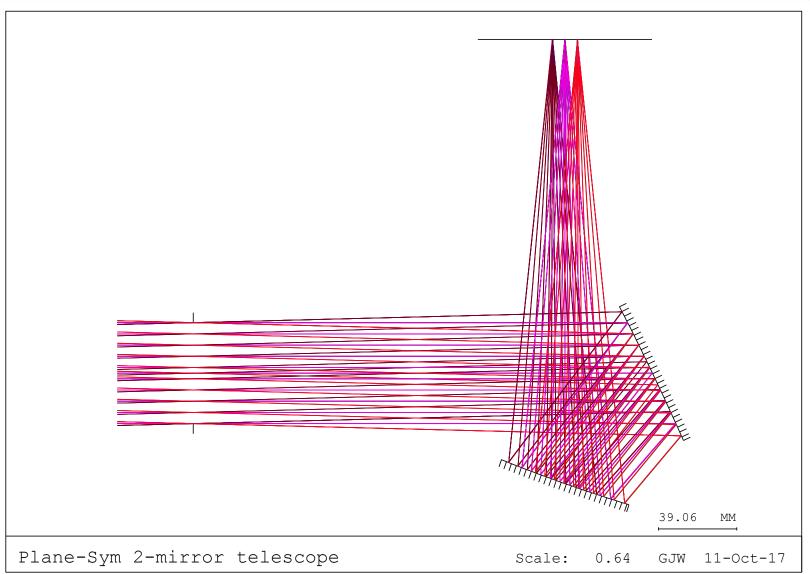


XY Penta Hardware





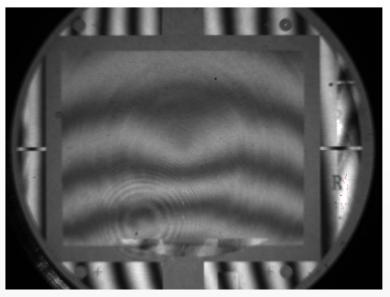

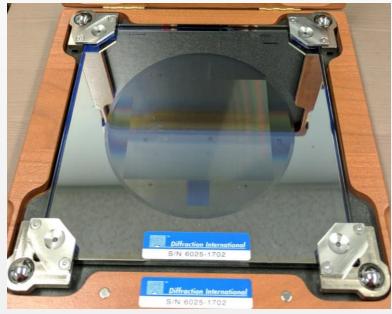

Concluding Remarks




- Freeform optics enable future NASA missions
 - Large astrophysics missions such as LUVOIR and OST
 - Small, wide field Earth Science and Planetary missions such as MiniSpec, TIMERS, or CubeSats
- NASA is working with industry to improve freeform fabrication quality, testing and cost
 - NASA SBIR program
 - NASA Space Technology Mission Directorate Programs

Thank You!



- ◆ EPIC for inviting me to talk today
- Matt Bolcar –LUVOIR
- Dave Leisawitz –OST
- ◆ Jon Ranson –MiniSpec
- Ish Shahid-TIMERS
- NASA Freeform optics Research Group Endeavor

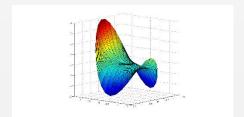


Backup





Parameter	Property	
Instrument Type	Infrared Radiometer	
Target Temperature	50 to 300 K	
Temperature Accuracy	≤2 K	
Spectral Range	8-to-200 μm in five distinct spectral channels	
Detector Type	Thermopile	
Detector Format	(5x64) <u>pixel</u> array	
Pixel Size	250 μm x 250 μm	
F-number	f/#2 at image plane	
Etendue (AΩ)	1.23 x 10 ⁻⁹ m ² sr	
Telescope	Narrow Field	Wide Field
Aperture Size	300 mm	50 mm
Detector Pixel iFOV	0.42 mrad	2.5 mrad
Resolution @ 60,000 km	25 km	150 km
Resolution @ 600 km	250 m	1.5 km
Resolution @ 100 km	84 m (2-pixel bin)	250 m
Mass	~9.4 kg (without harness)	
Envelope	780 mm x 586 mm x 579 mm	
Science Power	~8.7 W	
Mission Data Volume	~7.6 Gbits (Using as an example the 45 flyby's of the Europa Mission 13-F7 trajectory)	
Operating Modes	Multiple modes with minimum 0.1 s and maximum 1 s signal integration period	
Observation Strategy	Nadir <u>pushbroom</u> mapping	

TIMERS Instrument Overview

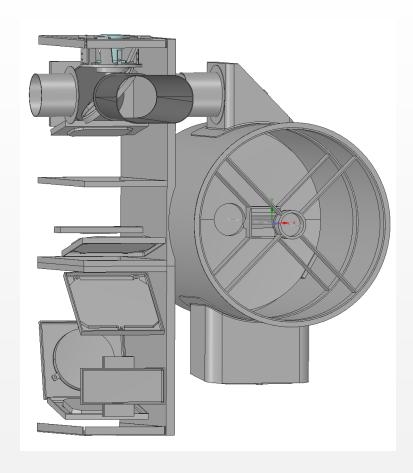


Structure and Function of Ecosystems (SAFE) Mission Concept



Rationale

- •NASA has a strong interest in detecting and predicting changes to Earth's ecosystems as described in our Strategic and Science plans
- •Earth's vegetated ecosystems sustain life on Earth
 - •They provide food, fiber and habitat and operate as key components of the carbon, water and energy cycles.
 - •Remove CO₂ from the atmosphere and convert it to stored biomass (and oxygen)
 - •Are susceptible to weather extremes and changing climate.
- •Vegetation functions in response to its environment that varies through the day.
- •Vegetation productivity is also related to 3D structure, as it is a key factor in determining the light environment within the canopy.
- •Productivity can be estimated by light use efficiency (LUE) models with remote sensing inputs that account for vegetation stress from soil moisture, disease and insects.
- •Shadows caused by 3-D structure and solar angle limit the accuracy of this approach from space.
- •Accurate GPP and LUE measurements require multitemporal measurements.

Global Snapshot of Net Primary

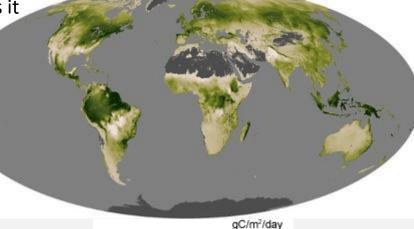

Structure and Function of Ecosystems (SAFE-ISS) Mission PI KJ Ranson/618




Background

- The major information domains in remotely sensed data are: spectral, spatial, and temporal.
- The temporal domain is an area that is under-explored in land surface remote sensing.
- Vegetation responds to changing environmental conditions in different ways at different timescales:
 - Regulation => xanthophyll cycle pigments => minutes to hours
 - Adaptation => photoprotection, changes in carotenoid pigment pools => multiple days
 - Structure => photodamage, senescence => Monthly/seasonal to yearly
 - Succession => species change => decades
- The response rates and magnitudes vary among vegetation types and seasonal stage, and with the nature and magnitude of environmental stresses.
- The magnitude, rate, and duration of these responses determine ecosystem processes such as carbon balance and evapotranspiration.
- Existing approaches, such as NDVI from AVHRR and MODIS, and proposed missions like Hyspiri are useful for addressing the changes at weekly/monthly time scales-but we know little about the nature and importance of the far more frequent short-term responses (Regulation and Adaptation)
- Multi-temporal measurements of structure and functioning of vegetation will provide the complete and more accurate measurements of productivity to advance NASA Carbon Cycle and Ecosystems science

LUE Measurement



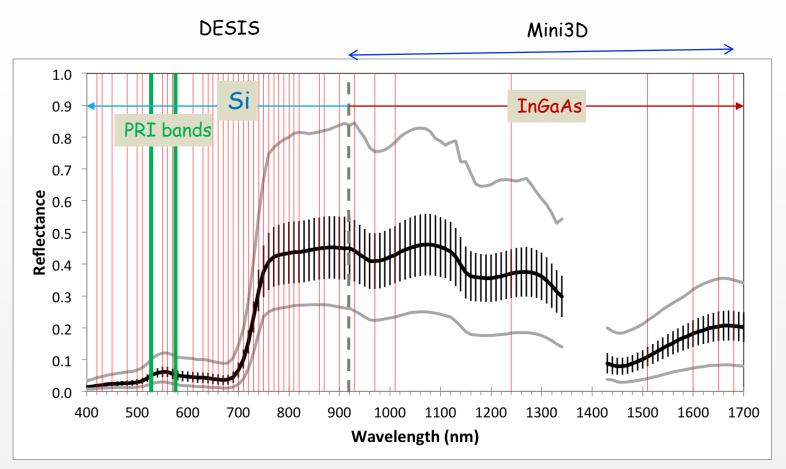

Spectral bands used by Vegetation Indices are indicated by vertical red lines. Green lines show PRI bands, (band locations rounded to nearest 10 nm)

Spectral reflectance mean and standard deviations are from corn field data covering diurnal periods over two growing seasons. Gray lines indicate minimum and maximum reflectances (F. Huemmrich/UMBC, E. Middleton/GSFC).



Science Concept

Combined measurements of structure and functioning of vegetation will provide complete and more accurate measurements of productivity to advance NASA Carbon Cycle and Ecosystem focus area science.

•Objective is to acquire temporal fine spectral resolution reflectance for plant functional indices and high-spatial resolution for vegetation 3D structure.

- •MiniSPec -Miniaturized spectrometer to measure photo chemical reflectance indices and other vegetation functional variables
- •Mini3D –High resolution stereo imager for3D structure including % shaded and sunlit vegetation
- Data acquisition up to 3 measurements in a day over the growing season for key biomes.

